







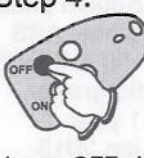

Programming

Please follow the steps below to Learn in remotes to the receiver's relay channel. The unit can store up to 80 remotes. When memory has reached its limit the unit will automatically exit out of program mode and sound a long beep. The unit auto exits after 10 seconds.







<p>Step 1.</p>  <p>1 beep</p> <p>Enters Learn mode</p>	<p>Step 2.</p>  <p>2 beeps</p> <p>Max 80 remotes</p> <p>Press button twice</p>	<p>Step 3.</p>  <p>Long beep</p> <p>Exits from Learn</p>
--	--	--

Programming On/Off Function

This function enables the receiver to be programmed with a button to turn the relay ON and a different button to turn the relay OFF.

<p>Step 1.</p>  <p>2 beeps</p> <p>Enters Learn for ON/OFF</p>	<p>Step 2.</p>  <p>3 beeps</p> <p>Learn ON signal Press button twice</p>	<p>Step 3.</p>  <p>3 beeps</p> <p>Enters Learn mode for OFF code</p>	<p>Step 4.</p>  <p>6 beeps</p> <p>Learn OFF signal Press button twice</p>	<p>Step 5.</p>  <p>Long beep</p> <p>Press twice to Exit</p>
---	--	--	--	---

Relay time settings

<p>1 Second</p>  <p>Gate & garage door automation</p>	<p>3 Seconds</p>  <p>Panic on alarm panel</p>	<p>60 Seconds</p>  <p>Maglock release / beam bypass</p>	<p>3 Min</p>  <p>Arming & Disarming alarm panels</p>	<p>Latch/un-Latch</p>  <p>Siren output or beam bypass</p>	<p>On / Off</p>  <p>Code 1 = ON Code 2 = OFF</p>
--	---	---	--	---	--

1-Channel Receiver: 500m Code-Hopping

Model No: **RX1-500**

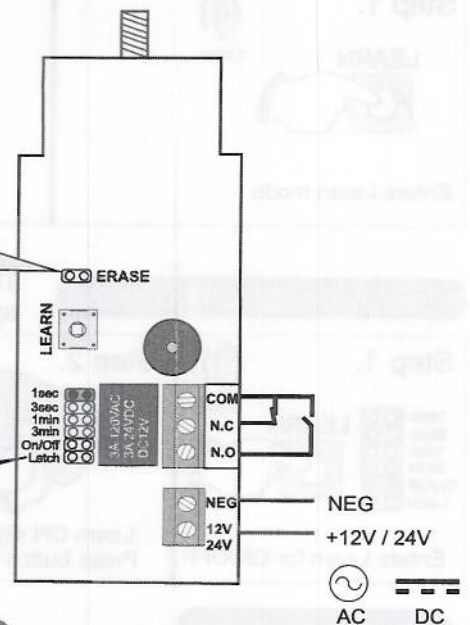
Ver.2

SPECIFICATIONS:

Encryption.....	Code-Hopping
Frequency.....	403.55Mhz
Receiving range.....	500m (Line of site)
Power input range.....	10 ~ 26V AC/DC
Current drain.....	11mA, 12VDC
Memory capacity.....	80 Remotes
Relay output times.....	1 second momentary
.....	3 second momentary
.....	1 Minute; 3 Minute
.....	On/Off (separate signals)
.....	Latching (flip flop)
Housing rating.....	Splash proof.
Housing material.....	White ABS
Dimensions.....	100 X 60 x 25mm
Weight.....	95 grams
Warranty.....	1 year
Product Release date.....	Jan 2013

New Feature:
Erasing individual remotes

Relay Time header



Opening the lid



Insert a small 1-1.5mm flat screw driver into the slot at the back of the housing and lever the lid open.

Defaulting.



Press and hold for more than 10 Seconds.

When the unit sounds a long beep the unit is Default. All remotes will be erased from memory